

electro-harmonix

#1 Echo Digital Delay

Congratulations on your purchase of the #1 Echo! The #1 Echo is a result of Electro-Harmonix's long experience in designing world-class delay lines. It presents you with musical, accurate and warm delays that surpass the very best performance instruments on the market. Reading these instructions carefully will ensure that you will get the most out of your #1 Echo.

WARNING: Use only the US96DC-200BI adapter that the #1 Echo comes supplied with. Do not use any other AC adapters. Using other AC adapters, even those made by Electro-Harmonix, could cause harm to the unit, the adapter or you. The #1 Echo does not use batteries.

- THEORY OF OPERATION -

The #1 Echo is an instrument that will echo any note or audio event that you play through it. You can control the time duration that will be applied between the played note and the echoed note. The echo will sound exactly the same as the original. The delay time range is from 10ms up to 2 seconds. Additionally you can choose the number of times that you want the echo repeated. This is known as feedback, which has a dedicated control.

As you start to use the #1 Echo, invest some time to experiment with the controls and how they interact. You will discover very interesting possibilities including double tracking (where the notes are a little offset) all the way to long delays that allow you to continuously play new lines on top of previous events. The longer the duration, the more possibilities you have to add new notes to the original. As you add more repeats with a longer duration you can build up complex textures that can be very effective.

CONTROLS

Blend Knob - When rotated completely counter clockwise, only the original, dry signal may be heard. As you rotate clockwise, the delay signal is mixed with your dry original signal. The farther you rotate, the louder the delay signal becomes. When rotated to the far right position, only the delay signal is heard. Think of the Blend knob as your balance control between dry and wet signals.

Delay Knob - This knob adjusts the delay time of your echo. When rotated to the full counter clockwise position, the echo will be set to the shortest delay time of 10 mS. When the knob is turned to the full clockwise position, the echo will be set to the longest delay time of 2 seconds.

Feedback knob - When turned completely counter clockwise, feedback is off and you will hear only the first echo. As the Feedback knob is rotated clockwise, you will hear more repeats. At the full clockwise position the number of repeats will be so great the #1 Echo will sound like it is looping the delayed signal but it is not, the signal will eventually fade away. This is very effective for overdubbing parts upon repeated parts. Multipart phrases and sonic textures are created this way. At the very longest settings care must be taken as some degradation of tone will occur over an extended period of time.

Activity LED - When the LED is lit; the #1 Echo is in effect mode. When the LED is off, the #1 Echo is in True Bypass mode. The Footswitch toggles between effect and bypass modes.

INPUT Jack - This ¼" jack is the audio input to the #1 Echo. The input impedance presented at this jack is 2MΩ.

OUTPUT Jack - This ¼" jack is the audio output from the #1 Echo. When the #1 Echo is in Bypass mode, the OUTPUT jack is connected directly to the INPUT jack.

9V Power Jack - Connect the AC Adapter's plug to the 9V Power Jack. The AC Adapter must be able to supply 9VDC at 200mA. The plug's inner ring must be negative, the outer ring positive.

- WARRANTY INFORMATION -

Please complete and return the enclosed warranty card within 10 days of purchase. We will repair the unit for free within one year of date of purchase. If you should need to return your unit for service within the warranty period, please include a brief description of the problem as well as your name, address, telephone number, copy of your receipt, and a check or money order for \$5.00 shipping and handling to:

Electro-Harmonix
C/O New Sensor Corporation
32-33 47th Avenue
Long Island City, NY 11101
Att: Service Department

Please make checks/money orders payable to New Sensor Corporation.

To hear demos by rock stars on all EH pedals visit us on the web at www.ehx.com.
Email us at info@ehx.com