

# **Wavewood Diffuser Ultra**

Installation Manual

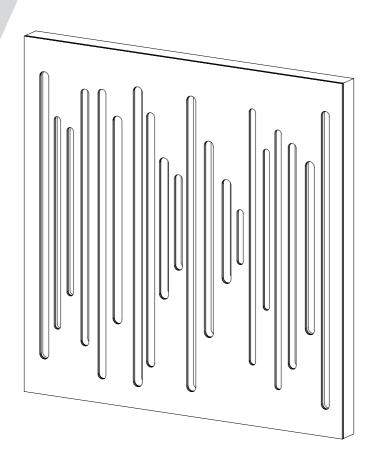



# Included

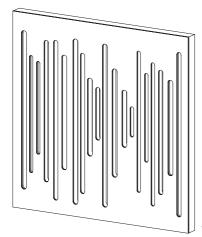


WaveWood Difuser Ultra x3

# Not Included


Level







Measuring Tape

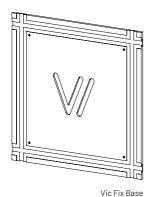


You may also install this product with the new VicFix J Profile fixation system using VicFix Base, sold separately.



VicFix J Profile 80mm | 3.14"

Apply Vicoustic Flexi Glue on the back of the acoustic panel, near the edges. Do not wait longer than 10 minutes after applying the glue to attach the panel to the wall.

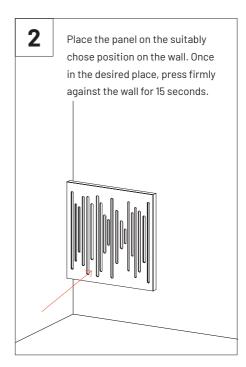

!

To ensure that you maximise the strength of the glue, don't make any adjustments to the panel after bonding

Wall and ceilling surfaces should be examined prior to installation, ensuring they are clean, smooth, and dry. If you have unpainted gypsum board surfaces, these should be primed with a drywall primer (or another material manufactured especially for the purpose), to equalize the absorption between the gypsum board face paper, joint compound, and skin coating materials. You should then apply the paint, and allow air circulation in order to dry the paint within the time frame specified by the paint manufacturer. Please ensure the paint is dry before installing the acoustic panel. Make sure the room has all the necessary conditions to receive the acoustic panels. After you apply the glue on the back of each acoustic panel, please ensure you hold the acoustic panel against the wall the required time (mentioned above), and ensure it stays fixed in place.

This method is also applicable to ceiling installations.

# Main Office, R&D & Logistics

Avenida do Pólo 3, Nº 159, Carvalhosa 4590-137 Paços de Ferreira, Portugal T (+351) 255 136 746

# Office

Rua Quinta do Bom Retiro Nº 16, Armazém 9 2820-690 Charneca da Caparica, Portugal T (+351) 212 964 100

# Info and Sales

E sales@vicoustic.com

www.vicoustic.com



© Vicoustic, 2019 | V1

No parts of this document might be copied and/or published without written consent of Vicoustic.